

# VANDAL-RESISTANT BUBBLER KIT 97446C

1. Remove panel to gain access to the bubbler from under the basin.
2. Remove bubbler by either unscrewing nut under basin and removing tube from the quick connect fitting (see Figure A below) or holding existing bubbler nipple and unscrewing bubbler.
3. Remove any fittings on water tube to allow the new bubbler nipple to fit. The free end of the copper tube must be 1/4" size with at least 3/4" of straight, round, and burr-free tube required to insert into the bubbler nipple. If tube is not available, the adapter tube may be soldered onto the existing tube to provided the proper connection.
4. Push bubbler nipple onto the 1/4" tube until properly seated, approx. 3/4".
5. Put rubber washer on the bubbler nipple then push nipple up through the hole in the basin.
6. Apply thread sealer (not provided) to the bubbler nipple threads.
7. Assemble the bubbler to the bubbler fitting. Hold bubbler in desired position and tighten nipple from under basin.
8. Operate the unit and check for leaks.
9. Re-assemble panel.

Figure A

