



architectural


INSTALLATION GUIDE

Arbor/Aqueduct/Naiad/Arco/ English Country Widespread Lavatory

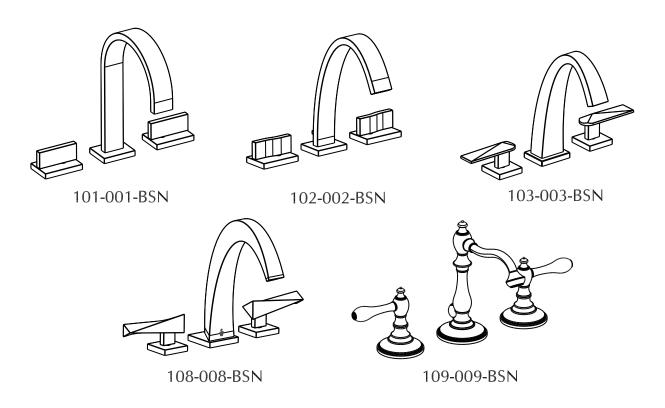


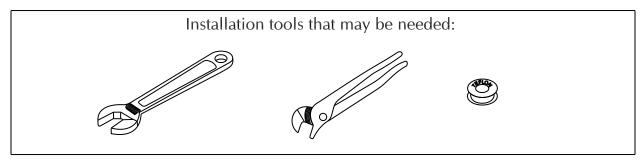


101SPT/102SPT/103SPT Spout Installation

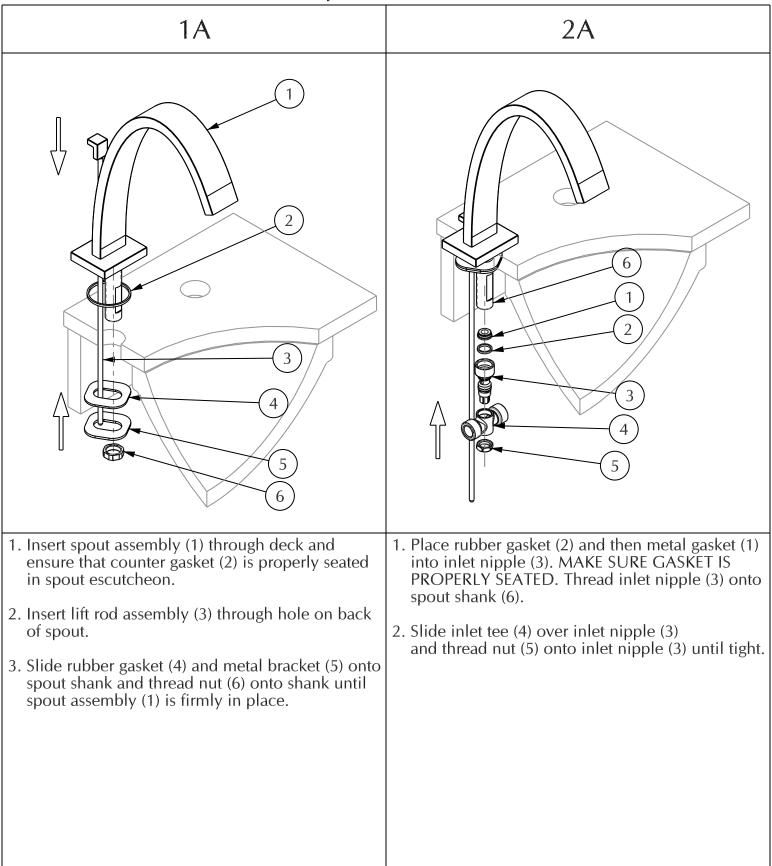


108SPT Spout Installation - With Escutcheon

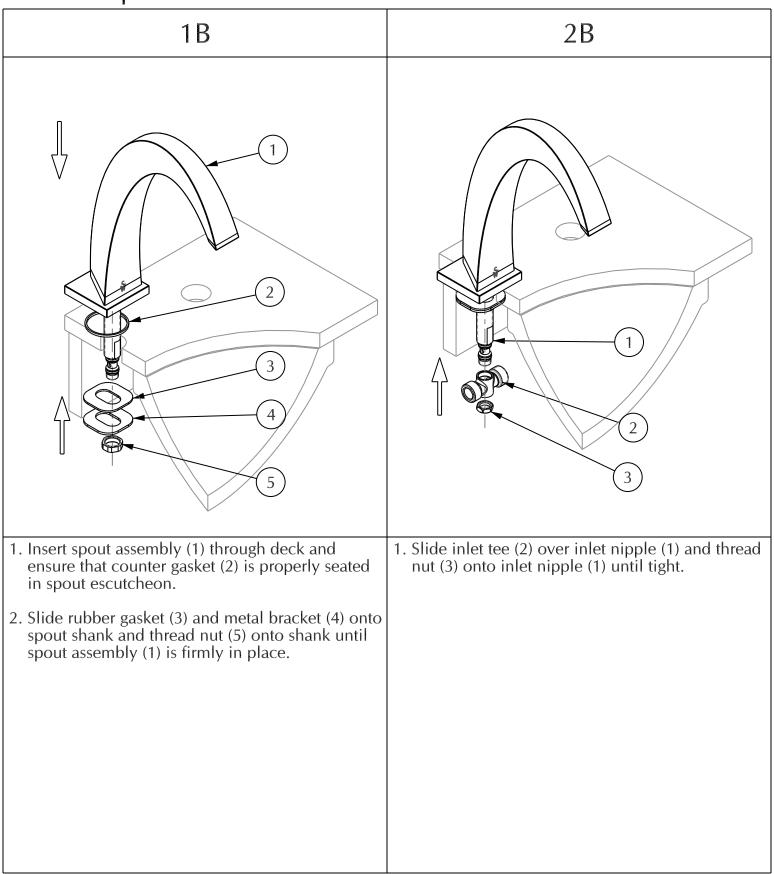


108SPT Spout Installation - Without Escutcheon

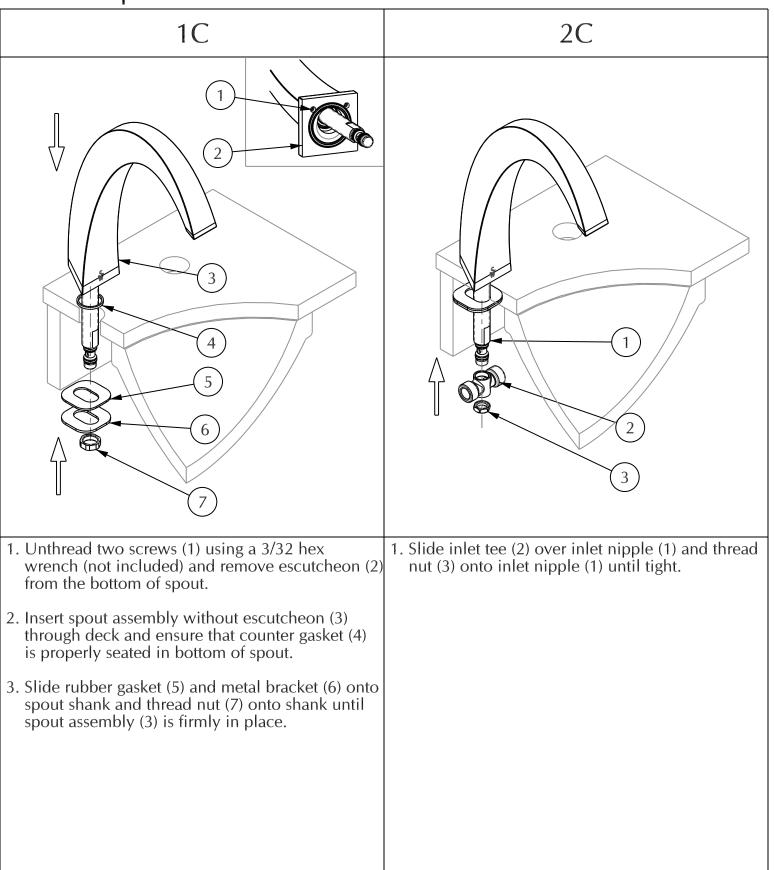


109SPT Spout Installation

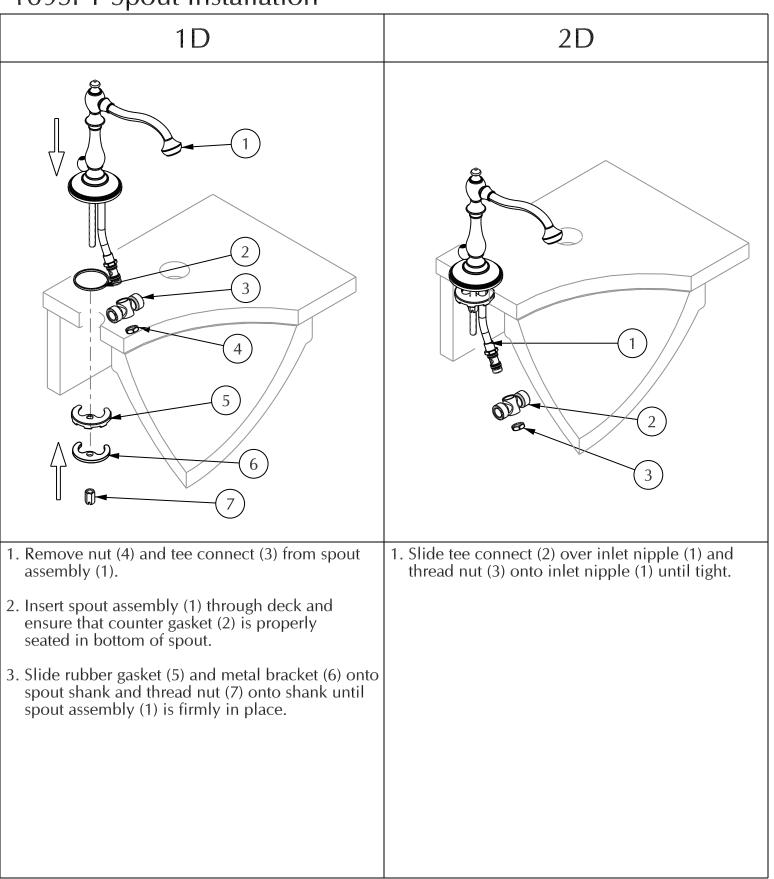


001HDL/002HDL/003HDL/008HDL Handle Installation

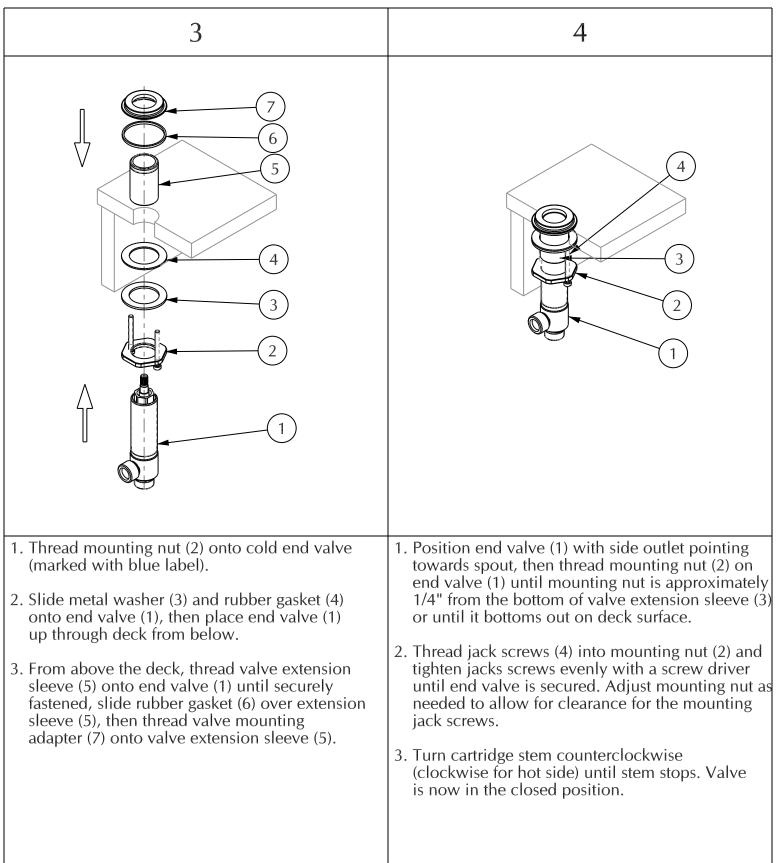

001HDL/002HDL/003HDL/008HDL Handle Installation

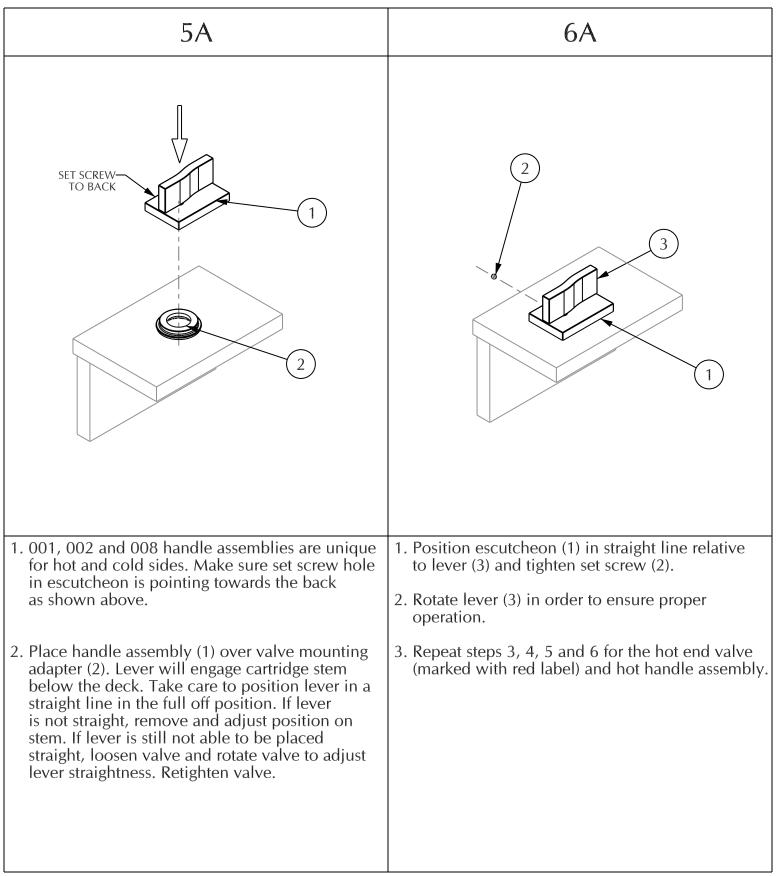


5B

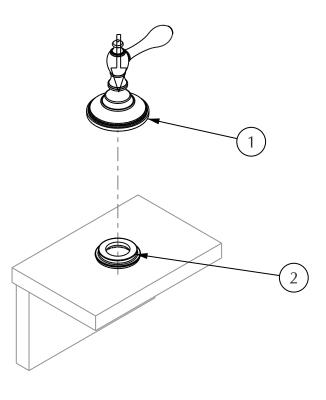


- 1. Thread handle assembly (1) over valve mounting adapter (2). Lever will engage cartridge stem below the deck. Take care to position lever in a straight line in the full off position. If lever is not straight, remove and adjust position on stem. If lever is still not able to be placed straight, loosen valve and rotate valve to adjust lever straightness. Retighten valve.
- 2. Repeat point 1 to install the other handle.


All Spouts - Water Supply Connection

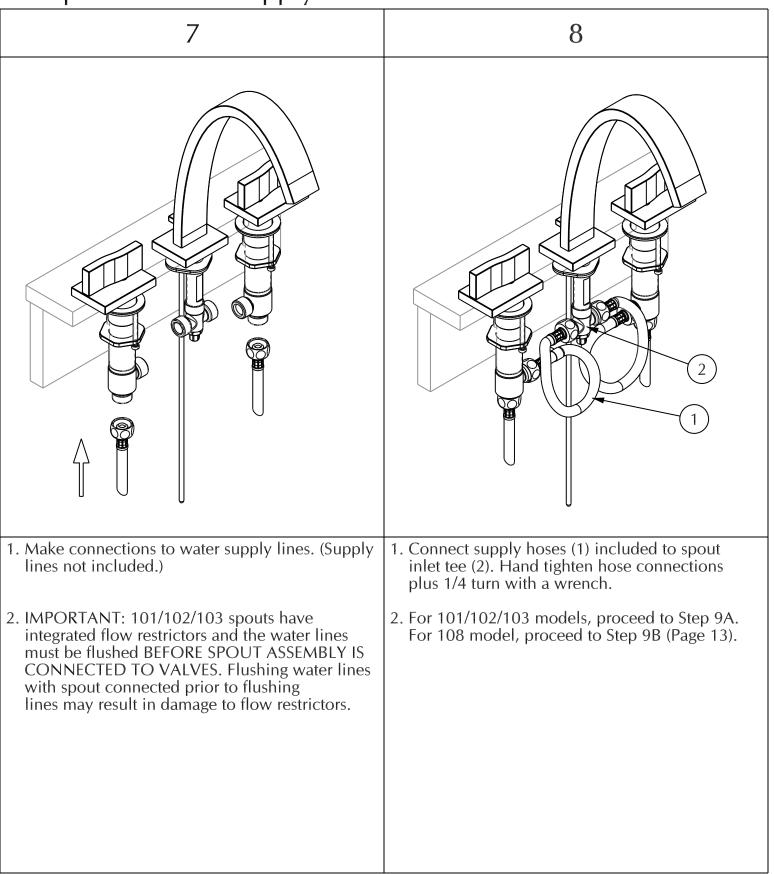


Standard Pop-Up Waste Installation

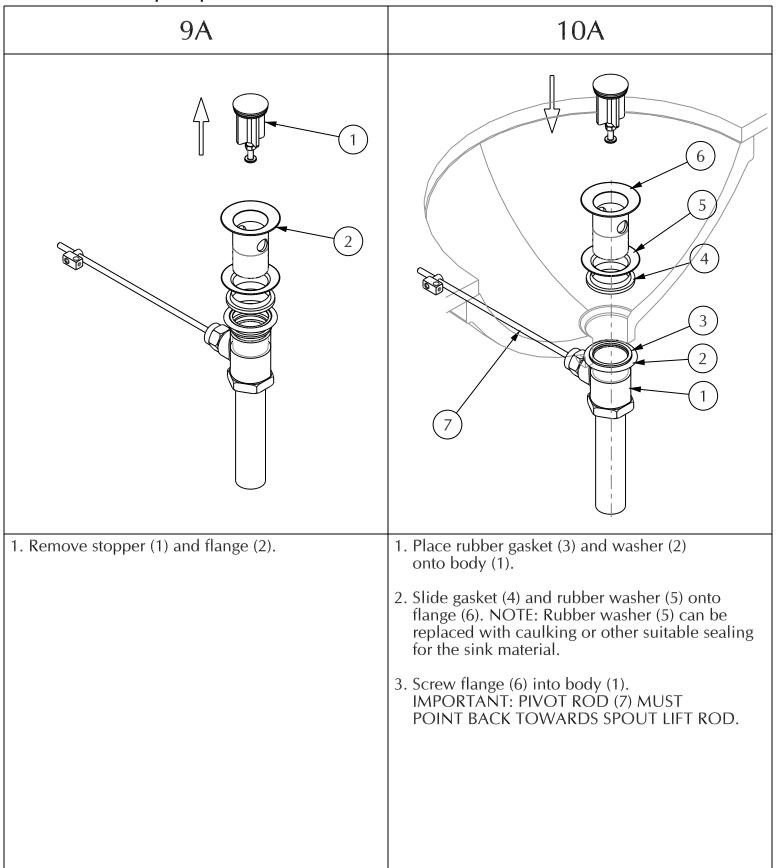


Standard Pop-Up Waste Installation

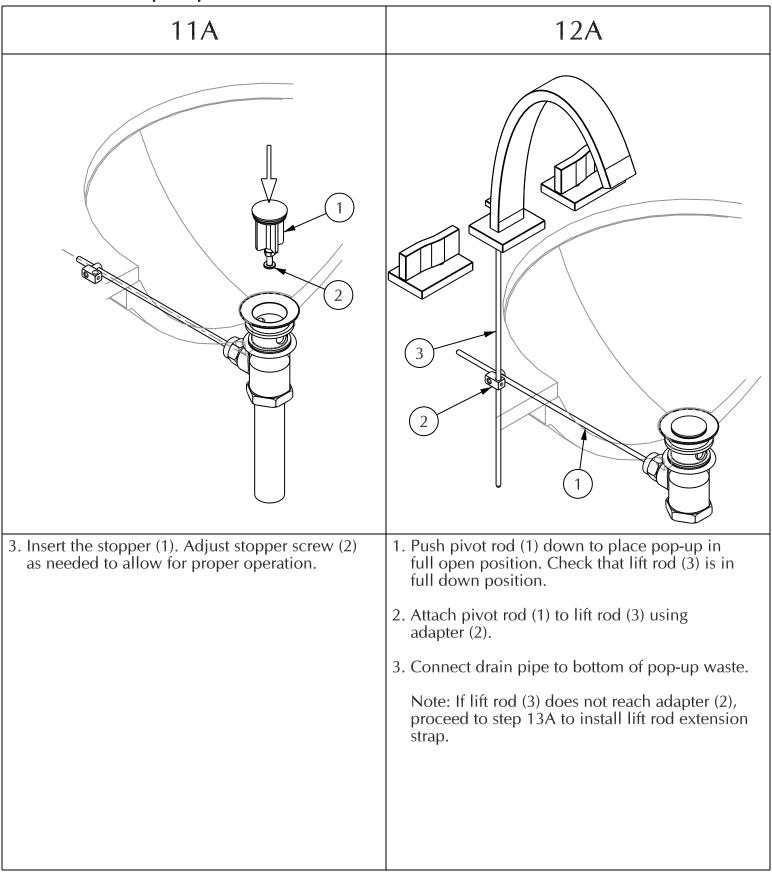

Standard Pop-Up Extension Installation

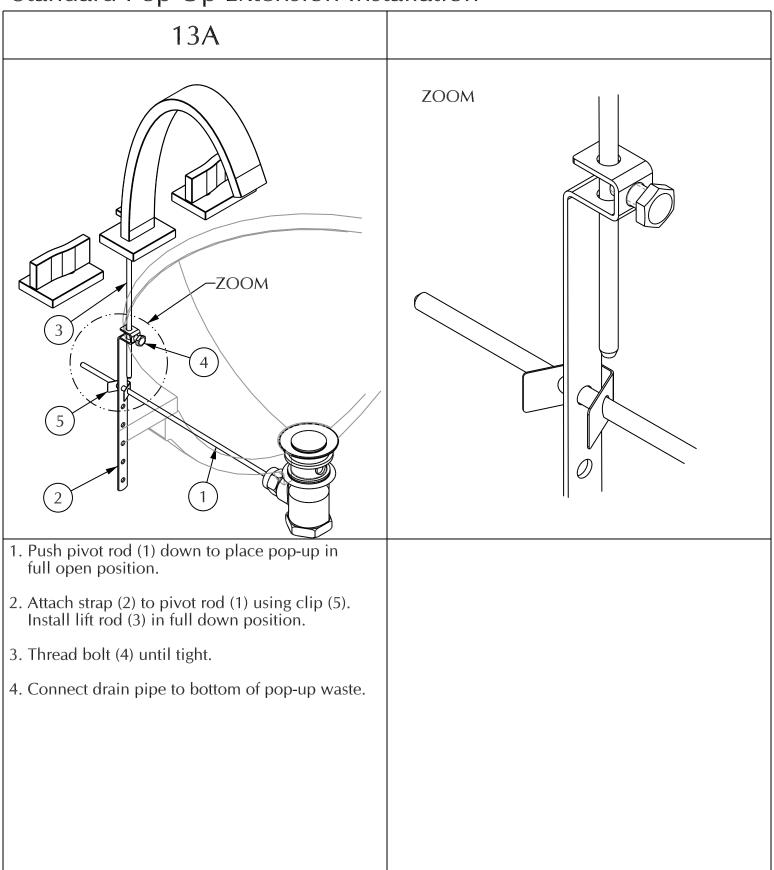

Click Pop-Up Waste Installation

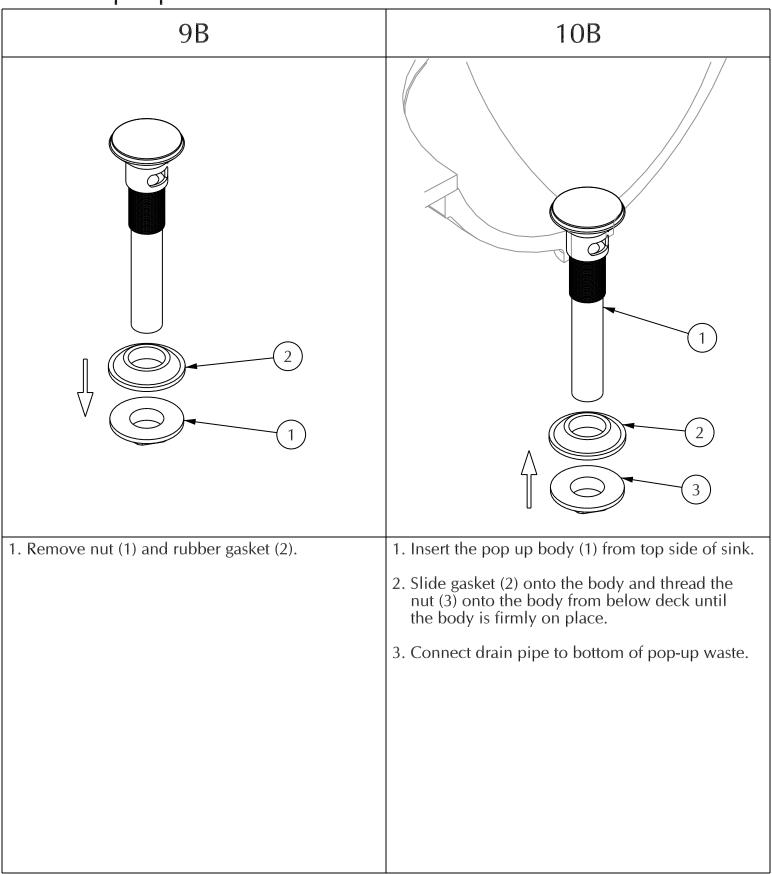



Cartridge Replacement 14 1. Turn faucet handles to full open position. 1. Loosen set screw (1) and remove handle Check all connections at arrows for leaks. assembly (2). Retighten connections if necessary. 2. Using a 3/4" deep well socket (3), unthread cartridge (4) from body. 3. Using a 3/4" deep well socket (3), install new cartridge into valve body.

101-001-BSN/102-002-BSN/103-003-BSN Parts List


		1
ITEM	PART NUMBER	DESCRIPTION
1	11926	10-24/10-32 X .1875 Set Screw
2	10152	End Valve Assembly - Hot
2	10153	End Valve Assembly - Cold
3	10609	Deck Adapter Kit
4	10018	Gasket
5	10583	End Valve Mounting Kit
6	10039	Cartridge - Hot
б	10137	Cartridge - Cold
7	10023	Inlet Tee Nut
8	10376	Inlet Tee
9	10379	O-Ring
10	10382	Inlet Nipple
11	10381	Rubber Gasket
12	10455	Metal Washer
13	10383	1.5 GPM Flow Restrictor
14	10467	Spout Mounting Kit
15	10619	Aerator & Wrench Kit
16	10406	M3 x 4 Set Screw
17	10469*	Lift Rod Assembly
18	10402	Cartridge Removal Tool
19	11500	Hose


^{*} SPECIFY FINISH WHEN ORDERING

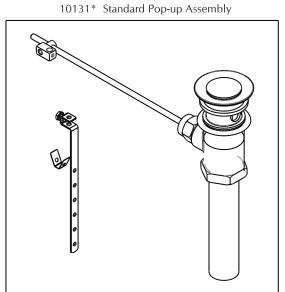

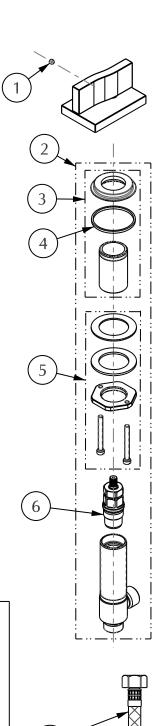

19

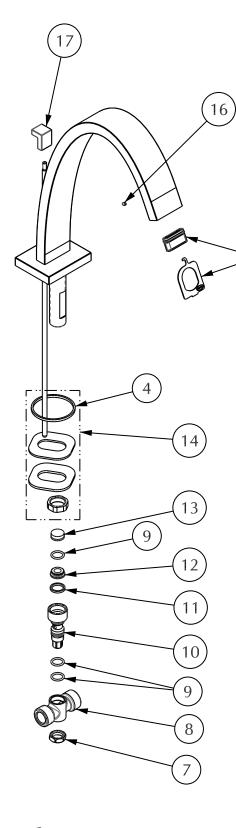

 


Page 15


10644 Rev B


108-008-BSN Parts List


ITEM	PART NUMBER	DESCRIPTION
1	11926	10-24/10-32 X .1875 Set Screw
2	10152	End Valve Assembly - Hot
	10153	End Valve Assembly - Cold
3	10609	Deck Adapter Kit
4	10018	Gasket
5	10583	End Valve Mounting Kit
6	10039	Cartridge - Hot
	10137	Cartridge - Cold
7	10023	Inlet Tee Nut
8	10376	Inlet Tee
9	10379	O-Ring
10	10467	Spout Mounting Kit
11	10620	Aerator & Wrench Kit
12	10402	Cartridge Removal Tool
13	11500	Hose

 
^{*} SPECIFY FINISH WHEN ORDERING

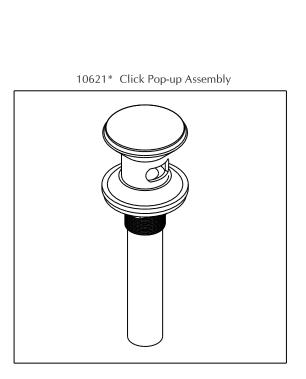

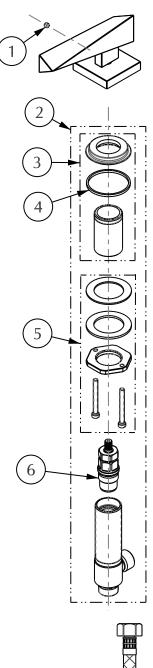

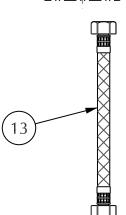

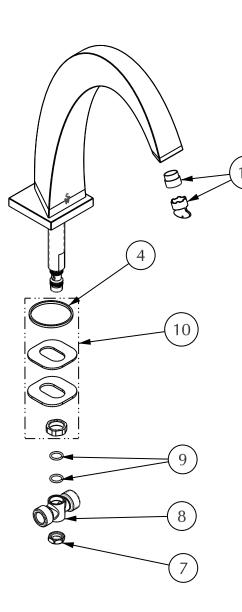




Page 16

10644 Rev B

109-009-BSN Parts List

ITEM	PART NUMBER	DESCRIPTION
1	10150	End Valve Assembly - Hot
	10151	End Valve Assembly - Cold
2	10582	Deck Adapter Kit
3	10018	Gasket
4	10583	End Valve Mounting Kit
5	10039	Cartridge - Hot
	10137	Cartridge - Cold
6	10590	Spout Mounting Kit
7	10023	Nut
8	10376	Inlet Tee
9	10379	O-Ring
10	10620	Aerator & Wrench Kit
11	12268*	Lift Rod Assembly
12	11500	Hose

^{*} SPECIFY FINISH WHEN ORDERING

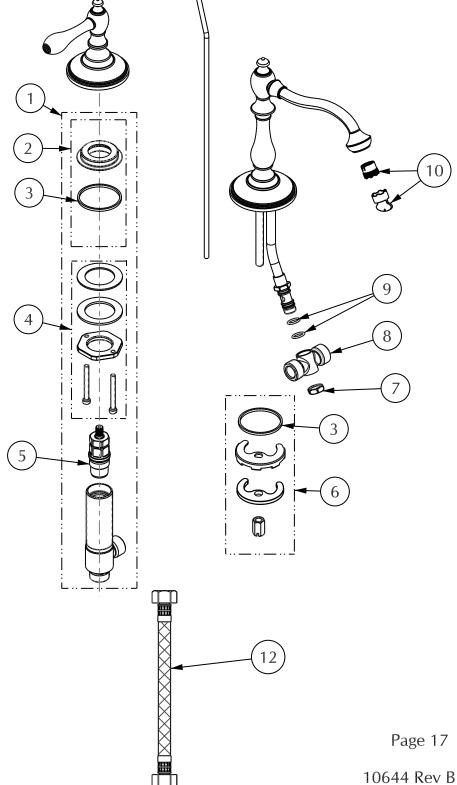

10131* Standard Pop-up Assembly

