

## INSTALLATION INSTRUCTIONS

### Parts Included


- Lift Rod (1) • Overflow Tube (2) • Overflow Tee (3) • Overflow Assembly (4) • Tub Shoe Assembly (5) • Drain Tube (6) • Tee (7) • Lower Drain Tube (8)

### Tools Needed

- Wrench • Pliers • Teflon Tape (use as a sealant on all male threaded tubing) • Tube Cutter • Clear Silicone •

### To Assemble Tubes

1. Remove lift rod (1) from overflow tube (2)
2. Remove overflow tube (2) from overflow tee (3)
3. Unscrew overflow tee (3) from drain tube (6)
4. Assemble overflow assembly (4) onto tub
5. Thread drain tube (6) back onto overflow tee (3)
6. Trim drain tube (6) if necessary

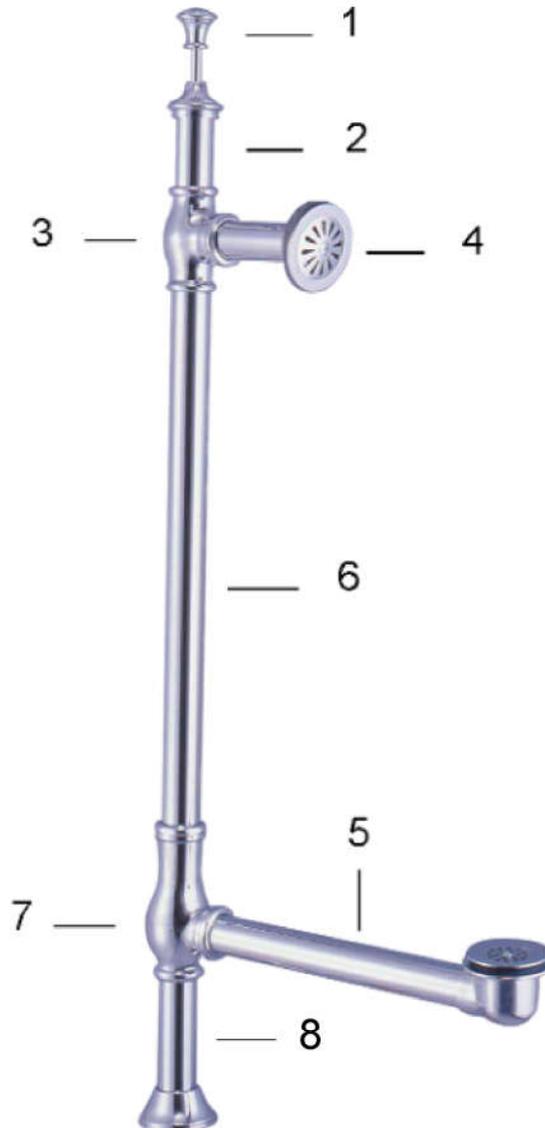

7. Assemble tub shoe assembly (5) to tub
8. Trim drain tube if necessary
9. Connect drain tube (6) to tee (7)
10. Connect tub shoe (5) to tee (7)
11. Connect drain tube to house plumbing
12. Replace lift rod (1) (trim length if necessary)

### Cleaning Instructions

Wipe this whole set off with warm water and a soft cloth. DO NOT use soaps, cleansers, or brass cleaners as they will disintegrate the protective lacquer coating and leave the brass exposed causing it to tarnish.

**NOTE: Please seek professional help if you have copper plumbing in your home.**