

# INSTALLATION INSTRUCTIONS




## Grab Bar

12" Grab Bar – Model D35703312.100

18" Grab Bar – Model D35703318.100





24" Grab Bar – Model D35703324.100



Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.




### RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing, supply stores. It is essential that the tools and materials be on hand before work is begun.

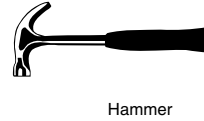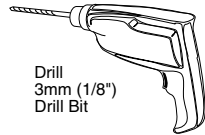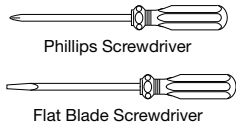

### ROUGHING-IN DIMENSIONS:

- For reference

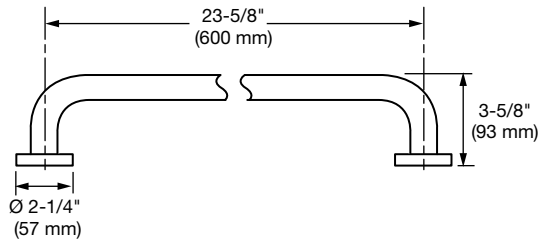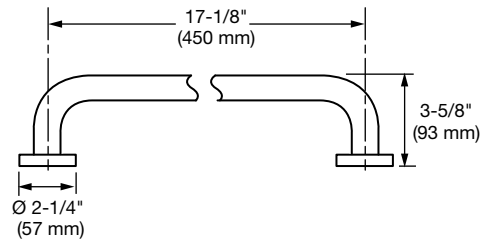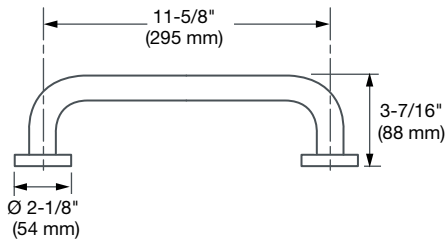

#### In the United States:

DXV  
One Centennial Avenue  
Piscataway, New Jersey 08855  
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734  
www.DXV.com

#### In Canada:

DXV  
5900 Avebury Road  
Mississauga, Ontario  
L5R 3M3  
Canada

Toll Free: 1-800-387-0369  
Local: 905-306-1093  
Fax: 1-800-395-1498  
www.DXV.ca

#### In Mexico:


DXV  
Via Morelos 330  
Col. Santa Clara Coatitla  
Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200  
www.DXV.mx

S A V E F O R F U T U R E U S E


# 1 INSTALL GRAB BAR

- The GRAB BAR (1) works best when secured to the wall studs or cross brace using WOOD SCREWS. If mounting into the studs is not possible, use appropriate wall fasteners provided to secure the installation.
- Mark a vertical **center line** in the location you wish to install the SLIDE BAR (1).  
**NOTE: The height from the finished floor is optional. See rough-in drawing for suggested dimensions.**
- Determine desired height from the finished floor to the lower support and mark a horizontal center line. Slide the two WALL ESCUTCHEONS (5) away from the MOUNTING FLANGES (3). Position the GRAB BAR (1) as shown in Fig. A and mark the location of the six mounting holes to be drilled. Fig. A. Using a #10 masonry drill, drill six mounting holes 1-1/4" max. deep. Fig. B.
- Install the six ANCHORS (2) provided into the mounting holes. Use a hammer to lightly tap ANCHORS (2) into place. Make sure they are installed flush against the finished wall. Fig. B.
- Align and place the GRAB BAR MOUNTING FLANGES (3) over the installed ANCHORS (2). Secure the GRAB BAR (1) to the wall with the SCREWS (4) provided. Fig. B.
- Push WALL ESCUTCHEONS (5) against finished wall. Rotate WALL ESCUTCHEONS (5) clockwise to lock into position. Fig. C.

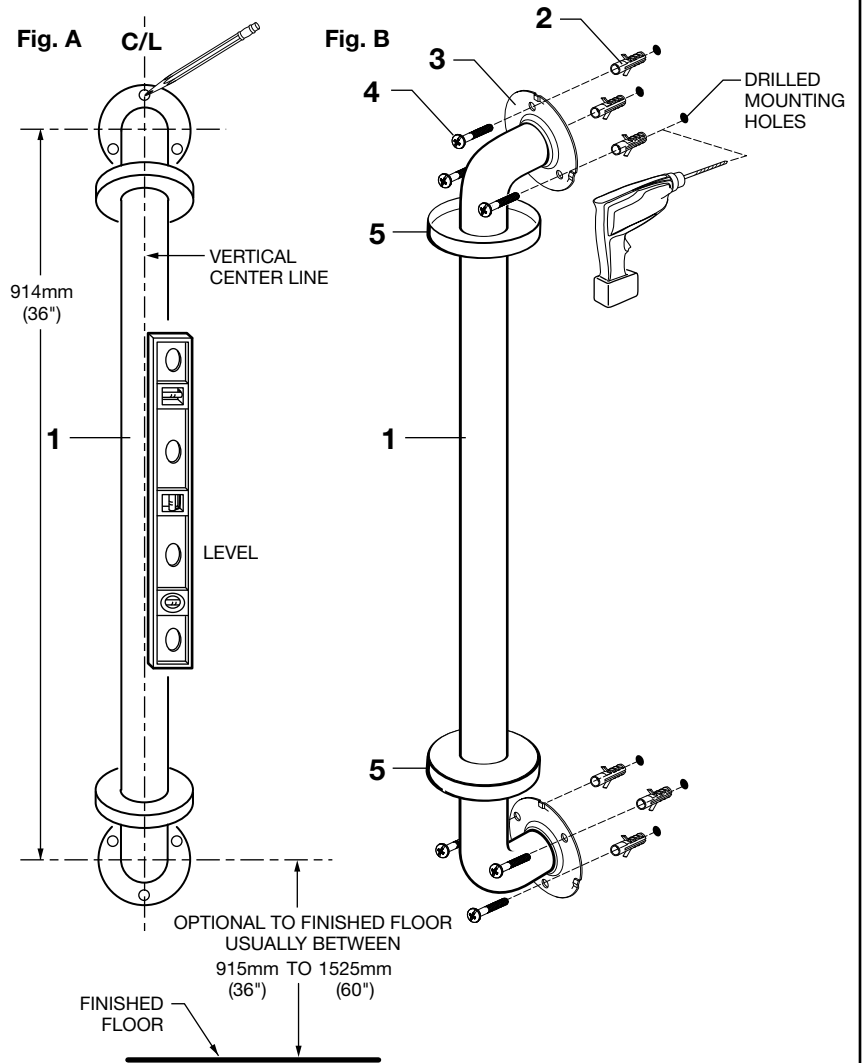

## CARE INSTRUCTIONS:

- DO:** SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.
- DO NOT:** DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

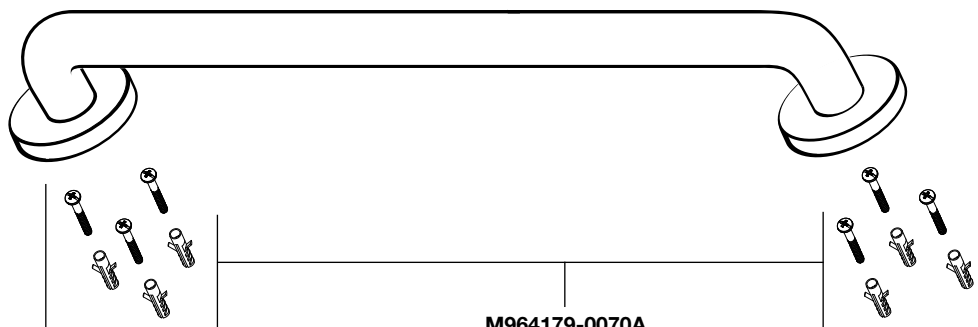

AVAILABLE FINISH

POLISHED CHROME 100