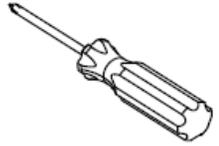
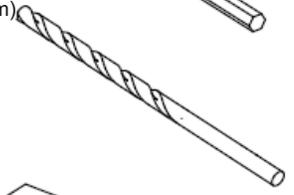
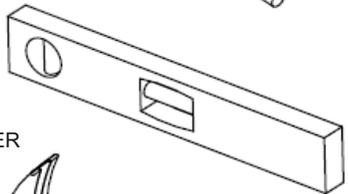
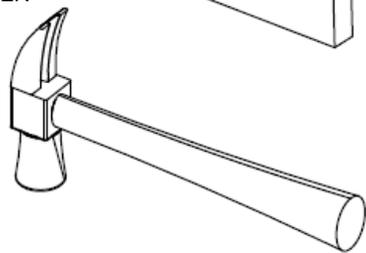



| ITEMS INCLUDED | | TOOLS REQUIRED | |
|-------------------------|---|-----------------------|--|
| DRY WALL ANCHOR |  X 2 | PHILLIPS SCREW DRIVER |  |
| TILE ANCHOR |  X 2 | PEN / PENCIL |  |
| #8 SCREW |  X 2 | 1/4" (6 mm) DRILL |  |
| MOUNTING FLANGE |  X 1 | LEVEL SET |  |
| M6 X 1 SET SCREW |  X 1 | HAMMER |  |
| 3MM ALLOY STEEL HEX KEY |  X 1 | | |
| VALET HOOK |  X 1 | | |

INSTALLATION INSTRUCTIONS

4817

VALET HOOK

GINGER
Luxury For Your Lifestyle™


2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207


WWW.GINGERCO.COM

NEW > 4817
 EN > 2880
 REV B

① REMOVE MOUNTING BRACKET

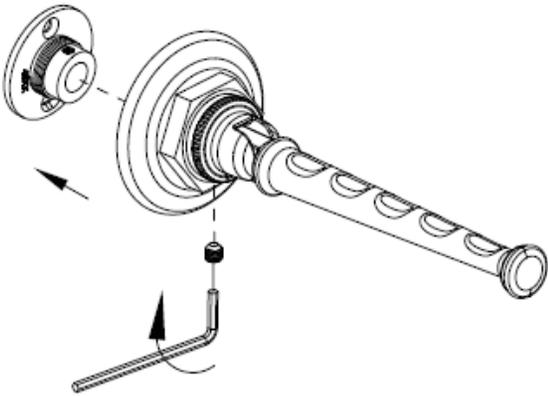

② ALIGN MOUNTING FLANGE AND MOUNT LOCATION

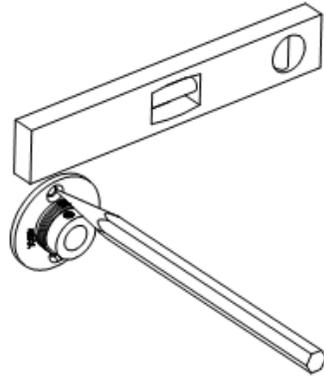


③ DRY WALL INSTALLATION

DO NOT DRILL




USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

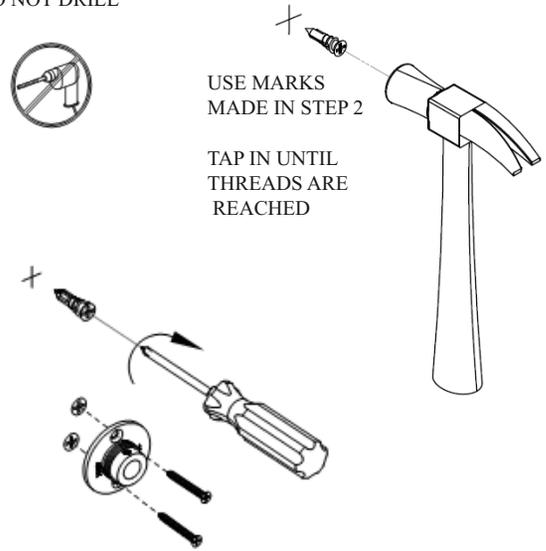


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

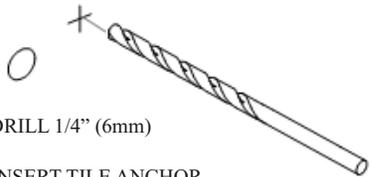


DRILL 1/4" (6mm)


INSERT TILE ANCHOR

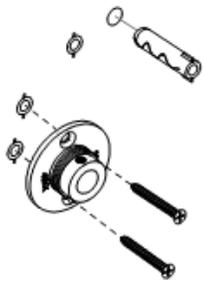

⑤ THREAD VALET HOOK ONTO WALL BRACKET

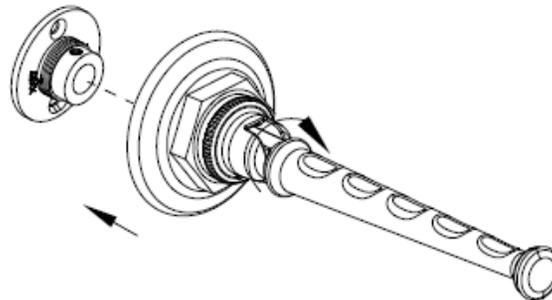

⑥ SECURE PRODUCT ONTO WALL BRACKET

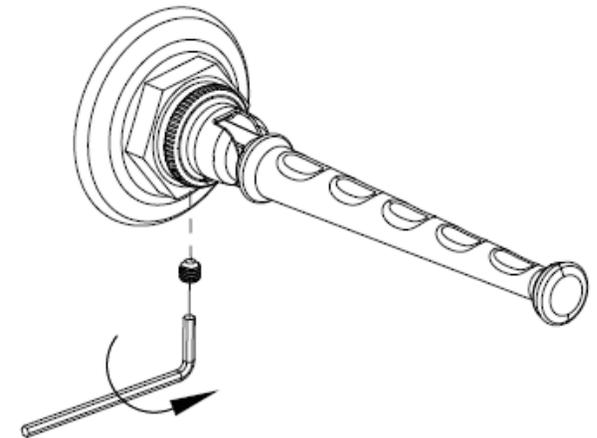

SECURE WITH SET SCREW