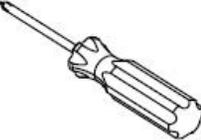
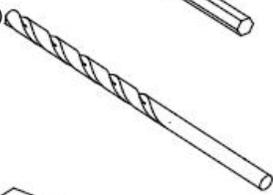
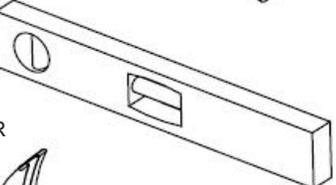
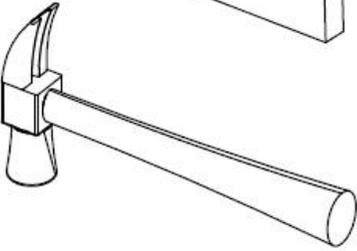
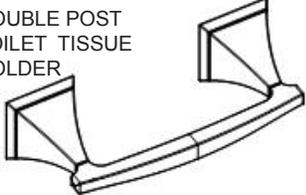


ITEMS INCLUDED	TOOLS REQUIRED
DRY WALL ANCHOR X 4 	PHILLIPS SCREW DRIVER 
TILE ANCHOR X 4 	PEN / PENCIL 
#8 SCREW X 4 	1/4" (6mm) DRILL 
MOUNTING BRACKET X 2 	LEVEL SET 
M6 X 1 SET SCREW X 2 	HAMMER 
3MM ALLOY STEEL HEX KEY X 1 	
DOUBLE POST TOILET TISSUE HOLDER X 1 	

INSTALLATION INSTRUCTIONS

4908


DOUBLE POST PIVOTING TOILET TISSUE HOLDER

GINGER
Luxury For Your Lifestyle™


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.GINGERCO.COM

GNG-4908
EN-2087
REV -

① REMOVE MOUNTING BRACKETS

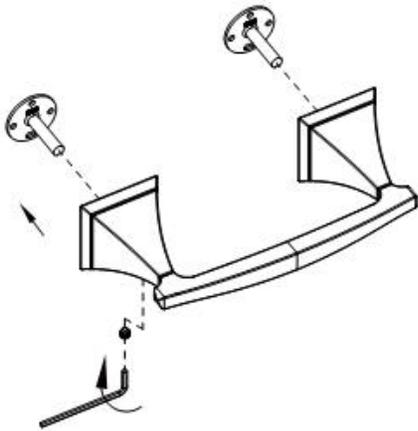


② ALIGN MOUNTING BRACKETS AND MARK LOCATION

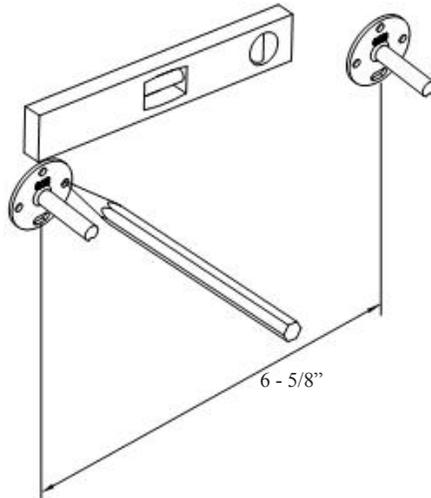


③ DRY WALL INSTALLATION

DO NOT DRILL

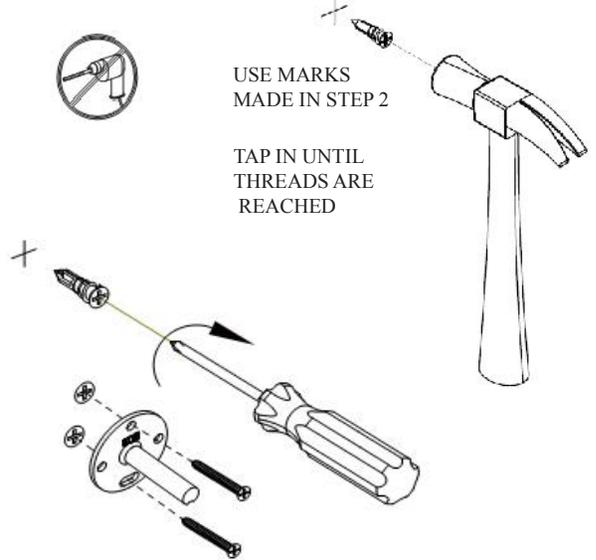

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

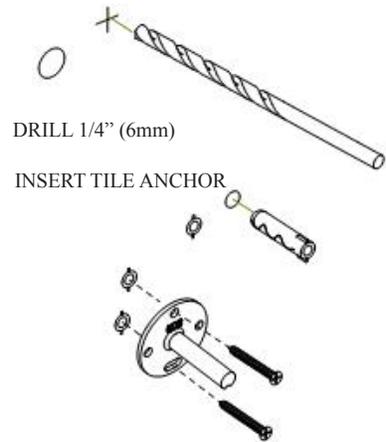

⑤ INSTALL PRODUCT ONTO BRACKETS

