





Linear Vanity Cabinets: 210-V72D-GW 210-V72D-WLT 210-V72D-WW

Assembly / Installation Instructions for CS-Series Tops

CS-Series Tops: CS-378D-DGG CS-378D-GW CS-378S-DGG CS-378S-GW

Materials
for
Installation:

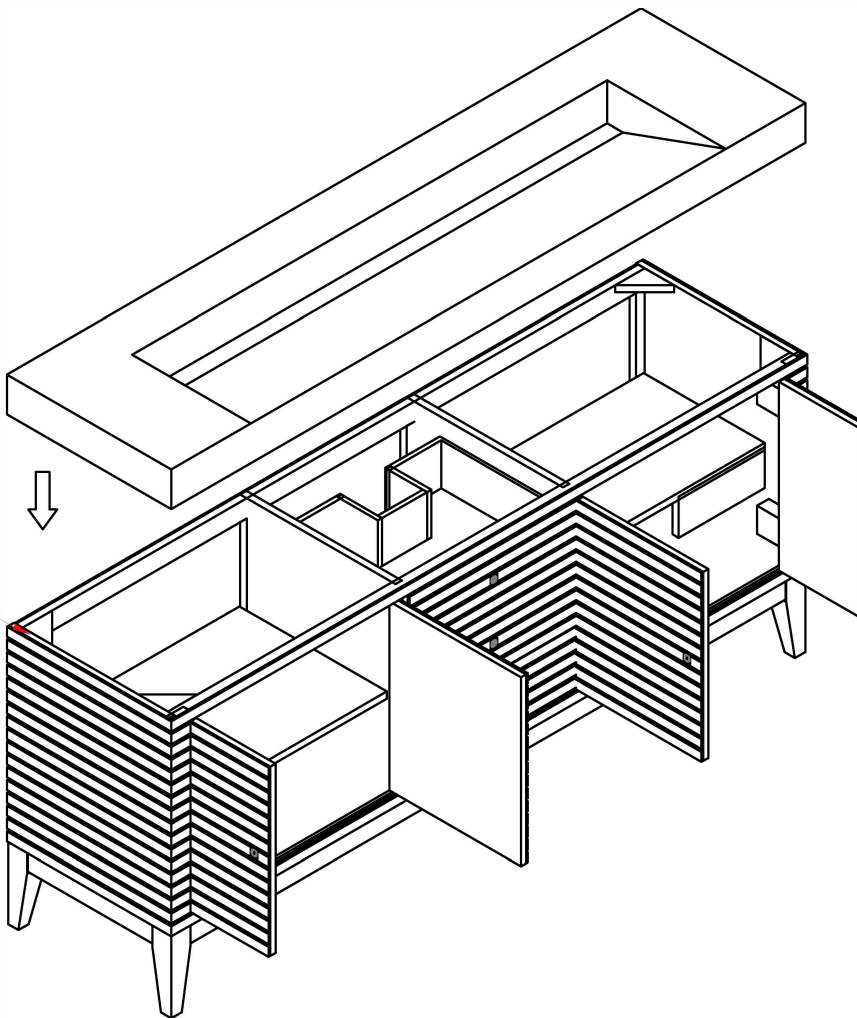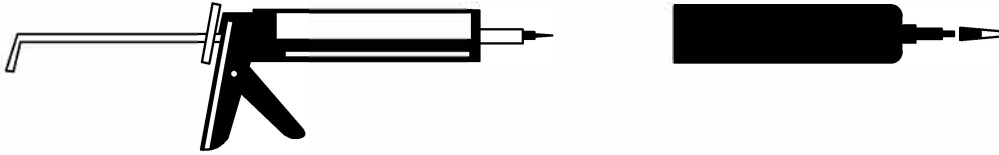

Step Notes:

Properly align and secure the countertop to the cabinet with high quality adhesive.